estelle



Installation manual Instructions for use FAQ



Installation manual


PACKAGE CONTENTS

Estelle Disposables Cleaning System

- Bottom
- Transparent Top

Installation set

- O-ring (7 pieces)
- Water Outlet
- Adapter with three rungs
- Knob
- Locking Cap
- 5 x adapters for various sizes of filters.

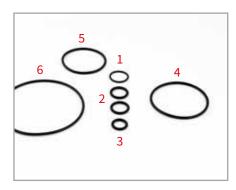

If not already installed, you will find these O-rings in the packaging.



Place O-ring number 1 on the water outlet.



Place O-ring number 2 (2x), 4 and 5 on the spindle adapter.



Place O-ring number 6 on the lower ring on the dial.



Place the water outlet into the bucket from the inside out and then place the dial.



Lock the knob with the locking cap.



Grease the spindle adapter for use with silicone. Your Estelle DCS is now ready for use.



Instructions for use

Step 1

- Remove the filter to be cleaned from your spa, whirlpool, or hot tub as directed in the pool's instructions for use.
- Place the Estelle on a flat surface.
- Take the top off the Estelle.
- Put the (provided) adapter that fits the filter in the Estelle. Put the filter on the adapter in the Estelle. The filter must clip snugly onto the adapter.
- Put the top on the Estelle.
- Attach one end of the water hose provided to a (cold) water source and the other end to the Estelle.
- Position the Estelle so the wastewater can drain unobstructed out the back drainage pipe and into the sewer (e.g. a kitchen sink or drain).
- Make sure the knob in front of the Estelle points upwards.

Step 2

- Start the water supply (turn on the faucet).
- Slowly turn the knob in front of the Estelle counterclockwise until the filter in the Estelle starts to rotate. Depending on the diameter of the filter, this will be less than a quarter turn.
- Wait until the entire filter is cleaned.

Step 3

- Now, slowly turn the knob on the Estelle clockwise until the filter in the Estelle rotates in the opposite direction. Depending on the diameter of the filter, this will be less than a quarter turn.
- Wait until the entire filter is cleaned.
- Depending on the size of the filter to be cleaned, the full treatment will be done after about 1 minute*.

Step 4

- Shut off the water supply and take the top off the Estelle.
- Remove the filter from the adapter and put the filter back in the Jacuzzi, whirlpool, or hot tub as directed in the pool's instructions for use.
 - * Repeat step 2 and 3, if necessary, until the desired result is achieved



Safety

- Rest the Estelle on a stable, flat surface.
- Use the Estelle with cold water only, and increase water pressure slowly.
- Always put the transparent top included onto the Estelle.
- Assure yourself that no electrical devices are in the Estelle's immediate vicinity (danger of electrocution).
- Keep the Estelle out of the reach of children.

Warranty

- Fabiotte Trading B.V. applies the statutory 12-month warranty period to all its products.
- Warranty void if product is improperly used.
- Defects due to connecting incorrectly are not covered under warranty.

Liability

- Fabiotte Trading B.V. is not liable for damage caused by the purchase and/or usage of supplied products. This, in regards to property damage and/or personal injury.
- Fabiotte Trading B.V. can neither be held liable for transporter delays during delivery nor for illness or statutory regulations / limitations.
- Liability is only applicable with clear fault or intent by Fabiotte Trading B.V. that can be tested against the law.
- On all purchases, Dutch law shall apply. Disputes, thus, shall be settled via the Dutch court system and in the Dutch language.

FAQ - reference pictures

4/6























FAQ - frequently asked questions

5/6

1. How does the Estelle function?	Place the filter with the appropriate adapter onto the central screw thread, pushing the filter to the bottom. Connect the water hose and open the faucet. When the filter rises completely to the top, turn the water inlet knob 180 degrees, allowing the filter to go downward in order to receive its second and final cleaning. When the filter is all the way down, it is ready for use in your spa.
2. Is the Estelle suited for my filter?	The Estelle is suitable for all fin filters with the following dimensions: - Outer diameter (outer fins) 100-250 mm (<i>Picture 2</i>) Maximum height 360 mm when the filter is open on both the top and bottom - 300 mm, if the filter is only open at the bottom (<i>Picture 3</i>).
3. Which adapter should I use?	Green adapter with four rings (Picture 4) This adapter is always required and is the first to be fitted downwards onto the screw-thread. (Picture 5) Yellow and orange adapters (Pictures 6 & 7) The small yellow adapter is designed for filters with a narrow opening at the bottom and narrow thread. The large yellow adapter is for filters with a wide opening at the bottom and narrow thread. The orange adapter is for filters with a narrow opening at the bottom and wide thread (Pictures 8 & 9). Adapter with green flaps (Picture 10). This adapter is for unthreaded filters.
4. What is the correct water pressure?	When connecting the Estelle filter cleaner the water pressure may vary. You therefore need to determine the correct water pressure by adjusting the faucet. With the correct water pressure: - The filter spins - The filter is cleaned on the outside and inside - Your Estelle remains stable
5. What is the correct position?	With the green dial, you can determine the direction of the water stream. Upwards and downwards: - When the water jet is directed to the right, your filter will spin upwards - When the water jet is directed to the left, your filter will spin downwards Inside and outside: - With the water stream more toward 9 o'clock or 3 o'clock, the emphasis is more on the outside - With the water stream more towards 12 o'clock, the emphasis is more on the inside.



FAQ - frequently asked questions

6/6

6. My filter does not rotate correctly at the bottom. What to do?	 There may be two reasons for this: The green adapter with 4 rings was not first positioned on the screw-thread before placing the filter on it. Turn the faucet off, lift off the cover, and remove the filter. Position the green adapter with 4 rings in order to then put the filter on it and press down lightly until the filter clicks into the adapter. The water pressure is too great Turn the faucet off, lift off the cover, and help the filter to get going a little and run the other way. Turn the green knob on the outside of the blue bucket to the right and turn the faucet on (measured water pressure).
7. My Estelle wobbles during cleaning. What to do?	There may be two reasons for this: - If you are using the green flaps adapter, it may be that it has not been inserted in the center of the filter. Remove the green flaps adapter and insert it once again. Make sure that it ends up being seated in the middle (it may start out skewed) - The water pressure is too great. Reduce the water pressure by turning the faucet down a little.
8. I would like some more information.	More details can be found in the instructional video http://www.estelle-dcs.com/videos
9. My question is not given here.	Please feel free to contact us through our contact form: http://www.estelle-dcs.com/contact-us

Contact

Fabiotte Trading B.V Achterdijk 54, 3237 LA Vierpolders The Netherlands info@estelle-dcs.com +31 (0)181 326114

Estelle Disposable Filter Cleaning System

Patented Design by Fabiotte Trading B.V. | Registered Trademark of Fabiotte Trading B.V.

Fabiotte Trading B.V. has been a supplier of wellness products for more than 10 years. In recent years, the Estelle has been developed with a great deal of energy and dedication. The result is a new, innovative product that we have brought to market within the framework of green enterprise and sustainability marketing. That is something that's important to us! After its introduction in late 2012, we managed in a very short while to establish a dealer network, with the result that thousands of people are already using the Estelle filter cleaner. And we are working daily to expand this network all over the world! At a later stage we will introduce several new products in this range. Fabiotte Trading B.V. are always in search of better and more innovative solutions than those that are currently available.